

Häfele Startec Frame Fix Door frame clamp fixing set

For wooden interior door frames




Installation

2 1


- (1) Screw base plate to door frame (2) Slide stop brackets onto base plates
- (allow stop brackets to engage) (3) Insert door frame into wall opening
- (note distance to floor covering)
- (4) Slide on mounting brackets and fix with screws, align door frame on hinge side,

tighten door frame (5) Mount blind frame

More detailed information on installation can be found in the installation instructions.

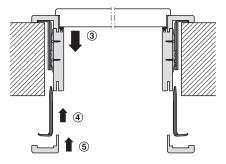


Note



Lateral tolerance between soffit and door frame must be min. 15 mm and max. 25 mm each side. Both blind frames require a recess of >3 mm for clamping jaws and mounting brackets.

- > Mechanical clamp set for easy fixing of wooden interior door frames, the door can be used immediately after installation
- > Assembly foam is not required, hence less impact on the environment and your health
- > Installation is independent from temperature and humidity
- > Can be adjusted after installation, can be easily removed
- > Free from hazardous pollutants (assembly foam, contaminated wooden parts, etc.), difficult special waste disposal is not required

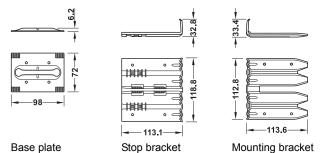

- Mounting bracket
- > Area of application: Clamping mechanism for wooden closed frames in indoor areas, installation in pressure resistant soffits made from masonry, plaster, concrete, wood, plasterboard and tiles (with tile trim edging profile) > Material: Sheet steel > Finish/colour: Zinc plated Vertical/horizontal, lateral > Adjustment facility: <40 kg
- Door weight: >
- With wall thickness: 125-165 mm >

Installation

6 fixing points (pieces) are normally required for each frame.

Supplied with

Scope of delivery for each fixing point

1 base plate

- 1 stop bracket
- 1 mounting bracket
- Fixing screws:
- 4 fixing screws for base plate
- 2 threaded screws for tightening

	Cat. No.
Häfele Startec Frame Fix frame clamp fixing set	984.52.000
Packing: 1 or 6 sets	

Order reference

When using door closers on interior doors, an additional frame clamp fixing set is required and must be installed close to the door closer.

\rightarrow Tile trim edging profile





 > Area of application: > Material: > Finish/colour: > Installation: 	For protecting tiles from damages tightening the Frame Fix frame cla Plastic Black For clipping onto stop bracket ar bracket	amp fixing set
		Cat No.

	Gal. NO.
Tile trim edging profile	984.52.011
Packing: 1 set	

Order reference

Set consists of 6 tile trim edging profiles (sufficient for one tiled side of the wall)

10