

Double-sided adhesive tape for skirting

# UZIN U-Tack

Securely install skirting

## Areas of application:

UZIN U-Tack is a multi-purpose adhesive tape for securely installing different types of skirting and floor covering strips.

### ► Suitable for:

- Textile floor coverings with all common backings
- PVC floor covering strips
- Flexible PVC skirting
- PVC cove formers
- Solid-core skirting i.e. Döllken
- Aluminium skirting
- Linoleum skirting

### ► Suitable for use on:

- Plaster
- Brickwork
- Metal (untreated)
- Painted surfaces
- Plastics
- Wood
- Concrete
- Ceramics
- Gypsum (primed)
- Wallpaper\*
- Smoothing compound (primed)

\* see "Notes for preparation"

Provides the highest possible level of emission safety and contributes towards creating a healthy room climate. Marked with the "Blue Angel" for low-emission floor covering adhesives and other installation materials according to RAL-UZ 113.



ÖKOLINE

Composition: acrylic copolymers, wetting and defoaming agents, laid scrims, paper

for skirtings and floor covering strips

ON surfaces up to 1.5 mm structure

## Product benefits / Properties:

- Multi-purpose
- For quick installations
- Solvent-free
- "Blue Angel" as per RAL-UZ 113
- EMICODE EC1 PLUS / very low-emission

## Technical data:

Packaging:	carton
Width of rolls:	25 mm / 40 mm / 50 mm / 85 mm
Length of rolls:	50 m
Shelf life:	min. 2 years
Colour:	transparent
Substrate temperature:	min. 15 °C
Open time:	none
Working time:	none

## Notes for preparation:

- ▶ Substrate preparation: The substrate must be permanently dry, hard, load-bearing, flat, free from grease, dust and silicon, in accordance with the national standards (EN, DIN, VOB, OE, SIA).
- ▶ Wallpaper must be cut / removed for the area covered by the skirting.
- ▶ Storage / transport: Do not roll solid-core skirting (creates tension).
- ▶ Apply a solvent-free primer (e. g. UZIN PE 260) to dusty walls and floors.

## The following is needed:


- ▶ UZIN U-Tack, rubber mallet, carpet knife



## Tip for application:

- ▶ Moisten the knife with water to facilitate cutting

## Application of curved PVC skirtings:

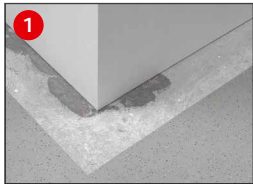


- 1 ▶ Install PVC floor covering fully on the horizontal area according to manufacturer's recommendation up to the mark (10 cm distance from the wall)



- 2 ▶ Place round protective sheet on unwinding plate
- ▶ Place UZIN U-Tack on round paper sheets



- 3 ▶ Apply UZIN U-Tack with the help of the unwinding plate 2 mm from the floor covering to the wall and rub down firmly

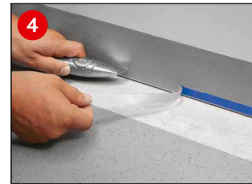

- 4 ▶ Cut suitable PVC cove former (min. 20 x 20) exactly matched and mitred
- ▶ Cut 2 cm of the protective paper of UZIN U-Tack at the lower edge and pull off



- 5 ▶ Apply cleaned PVC cove former from the corner
- ▶ Press down onto UZIN U-Tack section by section without stressing



- 6 ▶ Apply UZIN U-Tack to the floor from the edge of the floor covering installed and rub down well
- ▶ The PVC cove former will be slightly overlapping
- ▶ Install UZIN U-Tack to butt in corner area



- 7 ▶ Cut a strip appropriate to size
- ▶ Cut inside/outside corners to size with the help of a template and fit
- ▶ Install each fitted floor covering section continuously



- 8 ▶ Pull off protective paper from UZIN U-Tack adhering to the floor
- ▶ Start to install floor covering
- ▶ Rub or roll down firmly on the floor




- 9 ▶ Fold covering down from the wall and pull off protective paper
- ▶ Press floor covering to cove former and fold up; rub or roll firmly onto the wall


## Application of flexible PVC skirting:



- 1 ▶ Place the adhesive-repellent round paper sheet onto the on unwinding plate
- ▶ Place UZIN U-Tack on the paper sheet
- ▶ Apply UZIN U-Tack with the help of the unwinding plate 4 mm from the floor covering to the wall
- ▶ Rub down well

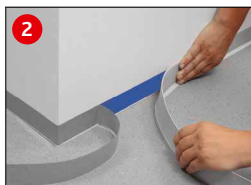


- 2 ▶ Pull off the protective paper section by section up to approx. 20 cm before the corner
- ▶ Without twisting or pulling install the skirting up to approx. 20 cm before the corner

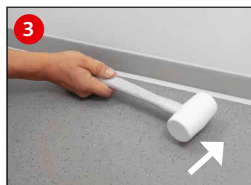

- 3 ▶ Immediately use a rubber mallet to tap along the skirting



- 4 ▶ For corners heat the back of the skirting and bend to shape
- ▶ Remove the protective paper, and without twisting or pulling install the skirting. Then tap along the skirting.

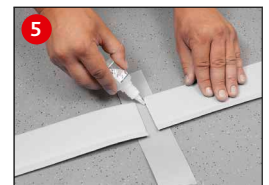

- 5 ▶ Avoid open joints by super gluing the ends together

## Application of carpet skirting:



- ▶ Fit UZIN U-Tack to the backing of the carpet skirting (by hand or with the applicator)



- ▶ Pull off the protective paper
- ▶ Without twisting or pulling install the carpet skirting



- ▶ Tap along the skirting using a rubber mallet




- ▶ Always Pre-install corners over a length of 20 cm
- ▶ Before removing the protective paper, pre-bend the carpet skirting at the corners (to relieve tension)


## Application of skirting strips:



- ▶ Depending on the widths of the skirting strip install the corresponding size of UZIN U-Tack to the back of the strip. Press down and rub along using a pressure roller

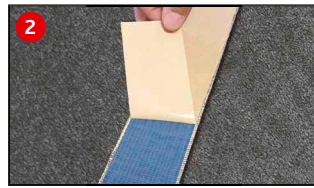

- ▶ Pull off the protective paper

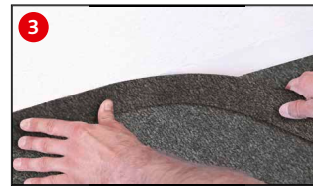

- ▶ Without twisting or pulling install the flooring strip onto the wall



- ▶ Push in firmly and then apply pressure along the skirting strip
- ▶ Immediately install silicone into the joint between the floor covering and skirting strips

## Application of solid-core and aluminium skirting:



- ▶ Pull up and lock the roll holder
- ▶ Fit the adhesive-repellent paper discs



- ▶ Depending on the direction of work, place the UZIN U-Tack in the applicator running to the left or the right
- ▶ Lower the roll holder



- ▶ Apply UZIN U-Tack to the wall using the applicator
- ▶ For skirting boards with a height of 10 cm, position a second strip of UZIN U-Tack by hand directly above the first strip



- ▶ Remove the protective paper
- ▶ Install the skirting onto the UZIN U-Tack
- ▶ Tap along the skirting using a rubber mallet

## Important notes:

Store in a dry, cool area and without exposure to direct sunlight.

- ▶ For a more dimensionally stable installation of PVC flexible skirting and PVC cove formers we recommend using Remur

## Protection of the workplace and the environment:

The product does not require any special work protection measures. For hygienic reasons, we would recommend that there should be no eating, drinking and smoking while applying this product. Keep out of the reach of children. EMICODE EC 1 PLUS – very low emission. Within the scope of current knowledge, gives off no emissions of formaldehyde, hazardous materials or volatile organic compounds (VOC).

For more information refer to [www.uzin.de](http://www.uzin.de) or +49 (0)731 4097-0

## Disposal:

The empty cardboard cores and packaging can be recycled. Material remnants can be disposed of as household waste.

## Warranty:

UZIN grants a 5-year warranty for all properties claimed in the installation instructions.

- Follow the generally acknowledged rules of the trade and the installation of floor covering in accordance with any applicable standards (EN, DIN, VOB, OE, SIA).

Suitable bonding tests must be performed on site before application.

The warranty becomes void if:

- the product is exposed to unusual impact especially of chemical or mechanical nature.
- used or installed differently than stated in the installation instructions.
- no steel pins/staples were used in the ends of the skirting in case of tensions.
- UZIN U-Tack is exposed to moisture.
- installation was performed below 15°C (on the wall).
- UZIN U-Tack is used in areas with increased humidity or thermal exposures (e.g. conservatories).