

Dry adhesive film backing for covering-on-covering installation

UZIN SIGAN 2

Dry adhesive for PVC/CV coverings, PVC design coverings, rubber coverings, textile coverings in sheets and tiles on structure-free floor coverings.

MAIN APPLICATION FIELD:

- ▶ PVC, CV floor coverings, PVC LVT up to 130 cm long
- ▶ homogeneous rubber floor covering up to 3.5 mm
- ▶ vinyl polyester floor coverings or woven vinyl
- ▶ textile floor coverings with all common backings (except PVC backing)
- ▶ carpet tiles with fleece or PVC backing
- ▶ Kugelgarn® and Kugelvlies®, FINETT 7, FINETT SOLID modular
- ▶ flotex

SUITABLE ON / FOR:

- ▶ homogeneous and heterogeneous PVC and CV floor coverings, PVC LVT (smooth), PVC safety floor coverings (smooth), PVC-coated cork floor coverings, PO floor coverings
- ▶ PUR and epoxy coatings (smooth, non porous, min. 3 months old)*
- ▶ artificial stone, terrazzo, ceramic tiles (smooth, without differences in height)*
- ▶ warm water underfloor heating systems
- ▶ wet shampooing and spray extraction cleaning according to RAL 991 A2
- ▶ heavy wear in commercial and industrial locations

Note: Obtain technical advice for additional combinations of floor covering and substrate


*see important notes



PRODUCT BENEFITS/FEATURES:

Sigan 2 is a patented, micro-perforated, metal-reinforced, double-sided adhesive tape for installation of textile and resilient floor coverings. It guarantees to leave no residues when removed later on. Suitable for all floor sizes. For interior use.


- ▶ quick and easy installation
- ▶ floor covering is immediately ready for foot traffic and loading
- ▶ later removal leaves no residues

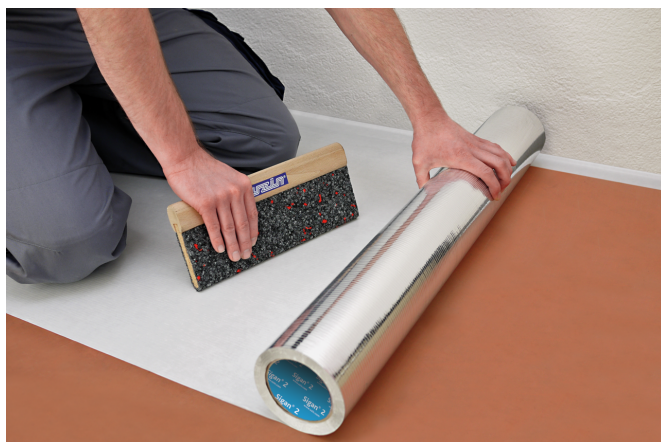

TECHNICAL DATA:

Packaging	carton
Pack size	Sigan 2: 75 cm x 25 m; Sigantape: 5 cm x 25 cm
Shelf life	min. 24 months
Color	silver / grey
Open time	unlimited
Setting time / cure time	none
Ready for foot traffic	immediately after installation
Minimum application temperature	15 ° C at ground level
Loadable	immediately after installation
Joint sealing	immediately after installation

*At 20 °C and 65% relative humidity.



for < new resilient and textile floor covering
ON > existing resilient and ceramic surfaces


SUBSTRATE PREPARATION:

- ▶ The substrate must be sound, smooth, permanently dry, free from cracks, clean and free from materials that would impair adhesion.
- ▶ Test the substrate in accordance with applicable standard or notices and report any deficiencies.
- ▶ Damp wipe the substrate.
- ▶ If there are oily residues, wipe the floor with a mild, diluted detergent and then neutralise well with water.
- ▶ Do not use any basic cleaners and do not sand.
- ▶ Cut out any damaged areas in the existing floor covering (e. g. seams, holes, imprints) and fill with stable, cement-based, non-abrasive filler compound (no dispersion compounds). If necessary, prime with a film-forming dispersion primer and allow to dry completely.
- ▶ In order to minimize a possible forming of joints, you should allow the floor covering and the Sigan 2 to acclimatise sufficiently (48 h) according to the manufacturer's recommendations.
- ▶ The datasheets for other used products have to be observed.

APPLICATION:

1) Install 50 mm Sigan 2 tape:



- ▶ Apply Sigan 2 tape along walls and doors, a) to even out uneven walls, b) for increased adhesion in the edge areas, c) for gluing areas that are difficult to access.
- ▶ Do not pull off the protective paper yet.
- ▶ Do not overlap the Sigan 2 tape, but mount edge to edge, or cut back to a butt-joint where overlapping.

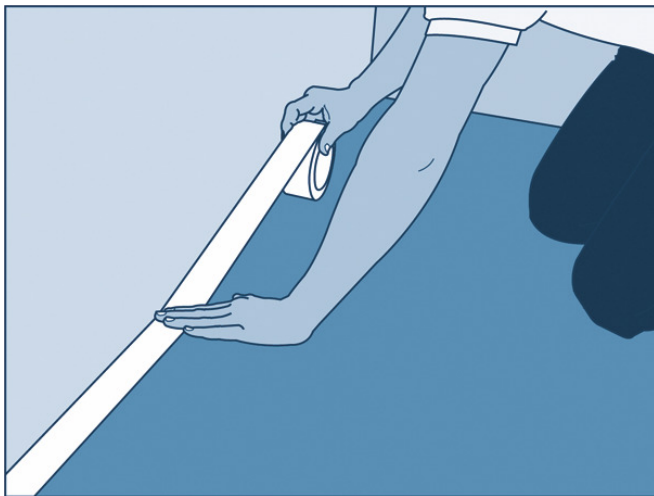

2) Installing 750 mm Sigan 2 Roll:


- ▶ Unroll the Sigan 2 in the running or working direction of the new floor covering – with a slight pressure on the roll – preferably roll out overlapping, rub down well and then cut back to the joint using a hooked knife, or roll out edge to edge directly (max. 3 mm gap allowed, no overlapping). Do not damage the substrate.
- ▶ Sigan 2 may overlap Sigan 2 tape but must be cut back to fit edge to edge.
- ▶ Install the last run of Sigan 2 starting from the wall. Cut back the resulting overlap to fit edge-to-edge using a hooked knife. Do not damage the substrate while doing this.

- ▶ Wrap any remaining Sigan 2 roll with protective paper (edge protection and protection against dust).
- ▶ Ventilation channels may show with resilient floor covering.
- ▶ Only roll out the same amount of Sigan 2 as the amount of floor covering that will be installed on the same day.

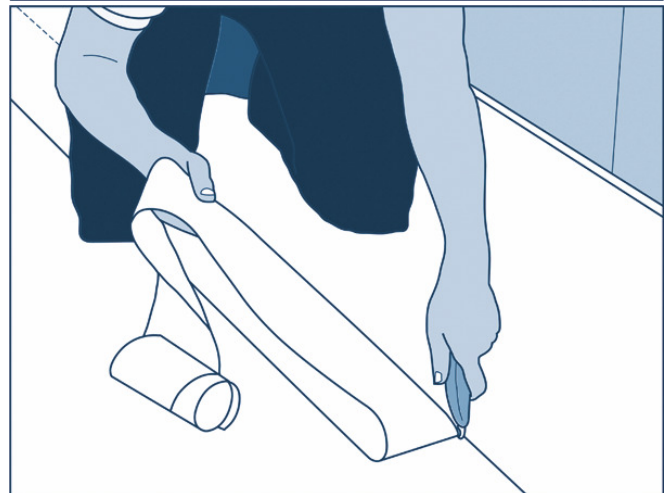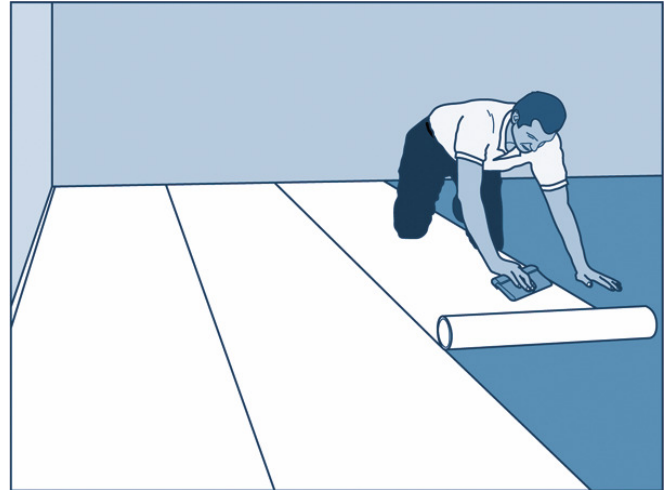

3) Preparations for horizontal conductive floor covering:

- ▶ Pull back the Sigan 2 protective paper approx. 40 cm across the direction of the run or the seam of the new floor covering. Do not fold!
- ▶ With a distance from the wall of approx. 10 cm over the whole width of the room, glue one run of self-adhesive copper strip onto the exposed Sigan 2. The non-adhesive side faces upwards.
- ▶ Install a terminal lug (approx. 1 m) at the level of the earth potential connection to earth overlapping the previously laid copper tape. The connection must be carried out by a qualified electrician!
- ▶ Place the protective paper back onto Sigan 2 and press down.
- ▶ Carry out the same procedure on the opposite side (2 connections per room).

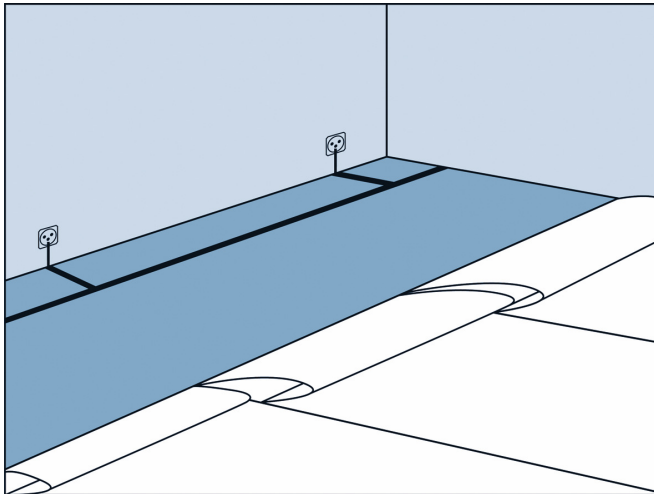

Attention: Only use coverings with horizontal conducting back coatings. The copper tape may show through the floor covering.


4) Installing the floor covering:

- ▶ Lay out the floor covering and fit approximately.
- ▶ Fold back half of the floor covering run in the running direction.



5) Removal of protective paper

- ▶ Pull the protective paper away from the Sigán 2 horizontally and straight up to the folded back floor covering.
- ▶ Cut off the pulled off protective paper leaving a remnant of 10 cm. Fold the remnant under the folded back floor covering (forming a flap).
- ▶ Stack the protective paper and roll together (minimises the waste volume).

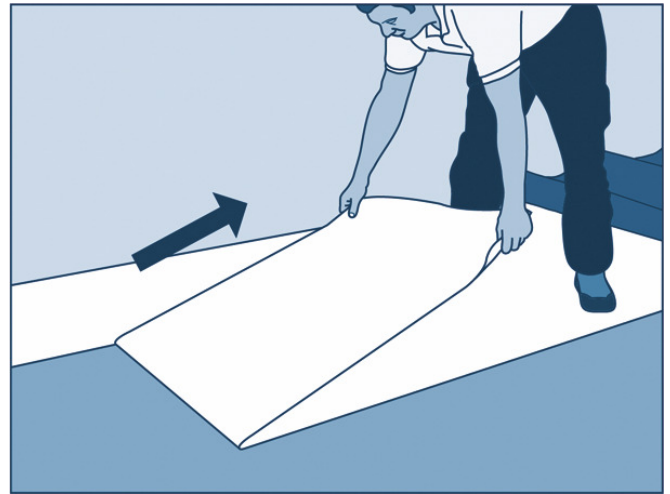


6a) Textile flooring:

- ▶ Lay the first half of the textile floor covering free from tension and undulations and rub down.
- ▶ Fold back the second half of the textile floor covering and pull off the remainder of the protective paper with the help of the flap.
- ▶ Lay the textile floor covering, rub/roll down and cut to fit at the edge.



Installing textile floor covering with seam:

- ▶ Cut seam according to manufacturer's recommendation before installation. Use a steel rail underneath when making a double cut (never cut through Sigán 1). The seam of the floor covering must not lie on the Sigán 2 joint.
- ▶ Install the carpet run precisely at the seam.
- ▶ Fold back half of textile floor covering (can also be taken back from the seam).
- ▶ Pull off protective paper horizontally and form a flap.
- ▶ Lay and rub down the first run, and then lay the second run bit by bit precisely along the seam, and rub down.
- ▶ Rub /roll down well in crosswise direction.

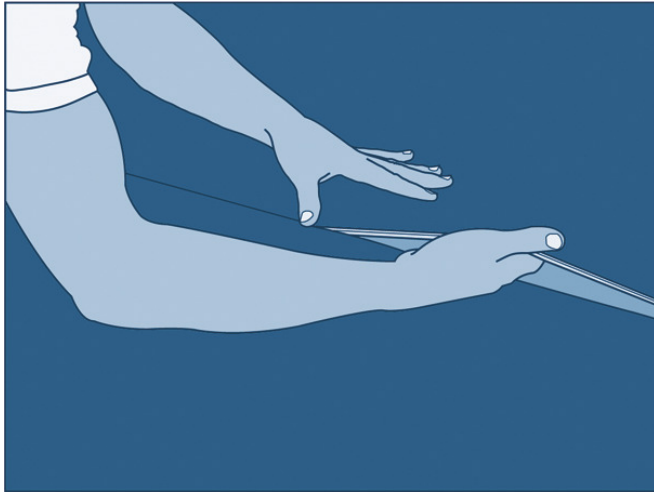

Attention: Never use knee kickers and seam clamps!

Water Trick

When laying the seam, when cutting to shape and when pushing the textile covering under radiators or around columns, etc., proceed as follows:

- ▶ Pull the protective paper from the Sigant 2.
- ▶ Dampen the Sigant 2 at the desired position using a sponge. Only use a little water as too much may damage the substrate.
- ▶ Push the textile covering into the desired position (aquaplaning effect).
- ▶ When the water evaporates, the Sigant 2 will recover its full adhesive strength.
- ▶ Rub down the textile covering again.




6b) Resilient floor coverings:

- ▶ Push in the first half of the floor covering bit by bit (avoiding air bubbles) and rub/roll down in crosswise direction.
- ▶ Fold back the second half of the floor covering and pull off the remainder of the protective paper with the help of the flap.
- ▶ Slowly push in the floor covering, rub/roll down and cut to fit at the edge.



Install elastic floor covering with seam:

- ▶ Cut seam according to manufacturer's recommendation before installation. Use a steel rail underneath when making a double cut (never cut through Sigant 2).
- ▶ The seam of the floor covering must not lie on the Sigant 2 joint.
- ▶ Without changing its position, fold back half of the floor covering.
- ▶ Pull off protective paper horizontally and form a flap.
- ▶ Lay and rub down the first run, and then push in the second run bit by bit up to the seam at an angle, and lay to match precisely.
- ▶ Rub /roll down well in crosswise direction.

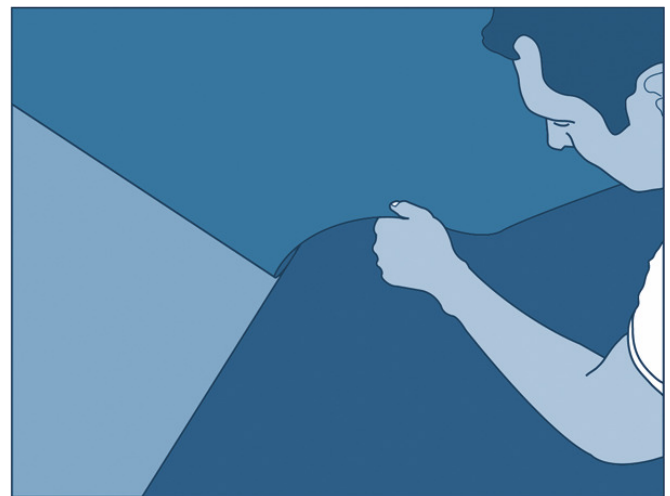


Welding/jointing seams and joints:

- ▶ Joints and seams of elastic floor coverings in sheets or tiles (except: luxury floor coverings in planks and tiles) must be thermally or chemically welded together.
- ▶ The specifications of the floor covering manufacturer must be observed when performing the welding/jointing action.
- ▶ Welding/jointing can be performed immediately after installation.

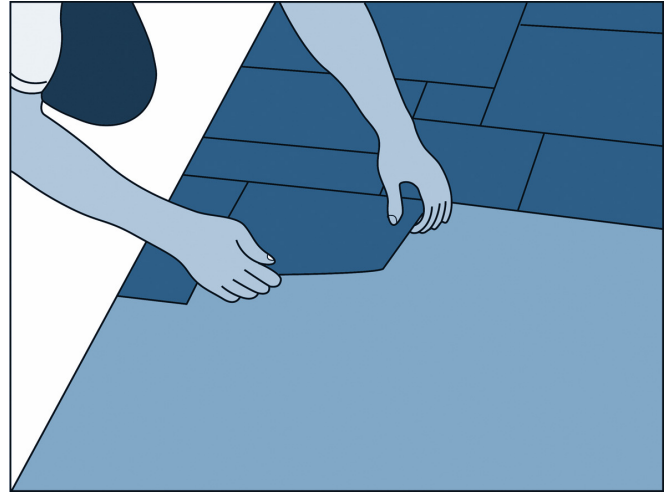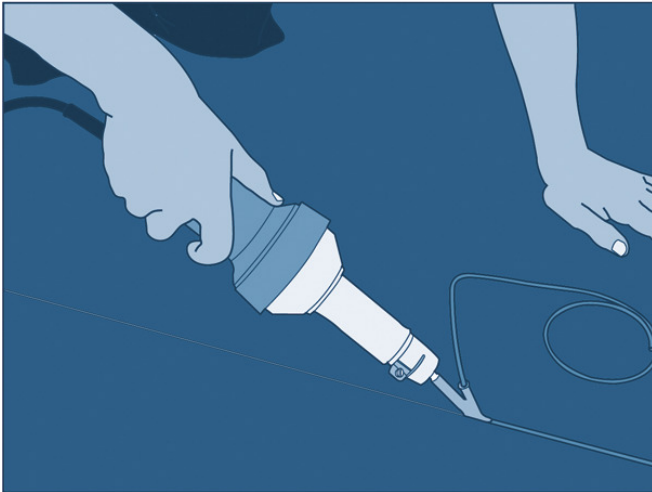

6c) Luxury floor covering and tiles:

- ▶ Measure the room, divide into planks/tiles. Mark the starting point of the first row of planks/tiles with a suitable pen on the protective paper.
- ▶ Place a steel rail along the starting points and align.
- ▶ Pull the protective paper away from the Sigan 2 horizontally and straight up to the steel rail.
- ▶ Tear off the protective paper along the steel rail at an angle toward the top. The straight line this created serves as reference line of the first row of planks/tiles.
- ▶ Stack the protective paper and roll together (minimises the waste volume).
- ▶ Install the planks/tiles along the reference line without stressing and press down firmly by hand.
- ▶ Continually pull back the protective paper horizontally and straight. Install the floor covering as described.
- ▶ If the installation process is interrupted, the protective paper can be reapplied as protection for the Sigan 2.
- ▶ After installation, rub/roll down firmly crosswise over the whole area.

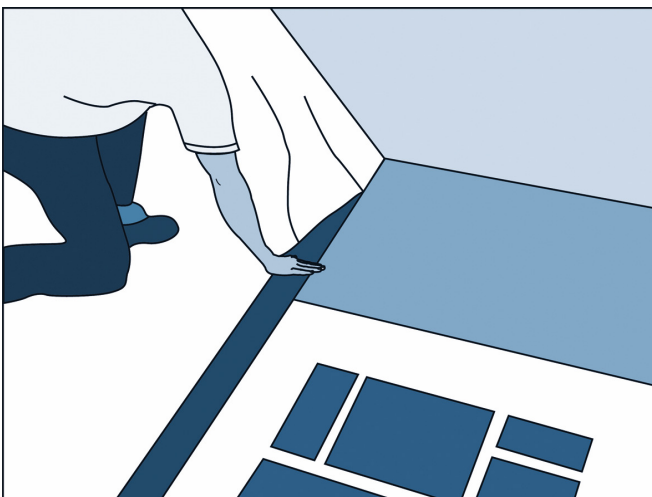

Sigan 2: Removing floor covering without residues – without damaging the substrate.

- ▶ First cut floor covering into strips (approx. 25 – 50 cm) using a hooked blade. Do not damage the substrate!
- ▶ Separate the floor covering with edge tape from the substrate starting at one corner.
- ▶ Pull away floor covering together with Sigan 2 at a flat angle, and you're finished!

No adhesive residues will remain on the substrate when using Sigan 2! As a rule, Sigan 2 can no longer be removed from the back of the floor covering, but can be disposed off with the floor covering without problem.

- ▶ Before any further laying with Sigan 2, the substrate must first be vacuumed and cleaned. Then install the new floor covering with Sigan 2.



IMPORTANT NOTES:

Store in the standing position in a dry and cool place, away from direct sunlight. Rewrap opened rolls in protective paper.

- ▶ PVC and rubber floor covering as well as textile floor covering with PVC backing in sheets and tiles, showing dimensional changes, tested according to the test standards EN 434 or EN ISO 23999, of $\leq 0.40\%$; luxury floor covering, showing dimensional changes, tested according to the test standards EN 434 or EN ISO 23999, of $\leq 0.25\%$ as well as tufted textile floor covering. Do not install LVT floor coverings or PVC tiles which appear warped or stressed.
- ▶ Resilient floor covering (exception of luxury floor covering) should be jointed / welded. The specifications of the floor covering manufacturer must be observed when performing the welding action.
- ▶ Jointing / welding can be performed immediately after bonding.
- ▶ Any structure present on the covered covering/substrate may show on the new covering or impair the adhesive strength. If in doubt, carry out a trial bonding.
- ▶ Rising humidity from the subfloor can't pass through the Sigán 2 foil carrier. Enclosed moisture could cause damage to the construction underneath.

Further substrates:

Levelling compounds → Sigán 1 with Planus

2-comp. PUR levelling compounds → Sigán 1 with Planus

Untreated wooden floors (e.g. chipboards, MDF boards) → Sigán 1 with Planus

Wood flooring / laminate → Sigán 3

Sealed cork floor covering → Sigán 3

Textile floor covering → Sigaway

UZIN grants a 5-year warranty for all properties claimed in the processing instructions.

Sigán 2 complies to VOB Part C, Pt. 2.7 Adhesives: "They form a fixed and durable connection, and cause no impairment to either the floor covering or the substrate and produce no pollution through odour after fitting".

- ▶ Follow the generally accepted rules of the trade and the technology for laying floor coverings according to the valid national standards EN, DIN, VOB, OE, SIA and TKB-Technical Briefing Note 12.

The warranty becomes void if:

- ▶ Sigán 2 products are used in outside areas, operating theatres and in vehicle construction.
- ▶ unusual influences, and in particular those of a chemical or mechanical nature, affect the product.
- ▶ substrate unevenness occurs (insufficient stability of the substrate).
- ▶ in case of any utilisation or processing that deviates from the laying instructions (never use Sigán 1 on stairs or walls).
- ▶ PVC / CV runs or tiles are not thermally or chemically welded / jointed and joints / seams arise for this reason.
- ▶ discolouration arises from chemical reactions between the floor covering and the substrate.
- ▶ if joints are formed or warping occurs due to dimensional changes of the floor covering.
- ▶ the floor covering was laid stretched and under tension.

- ▶ moisture affects the Sigán 2.
- ▶ laying is carried out at temperatures below 15 °C (at ground level)
- ▶ Sigán 2 is used in areas with increased air humidity and/or thermal loadings (e. g. conservatories).
- ▶ no adhesive trials have been carried out.

SEALS OF QUALITY & ECOLABELS:

- ▶ EMICODE EC 1 PLUS / Very low emission
- ▶ DE-UZ 113 / Environmentally friendly because of low emissions

COMPOSITION:

Acrylic copolymers, wetting and defoaming agents, plastic film, paper.

PROTECTION OF THE WORKPLACE AND THE ENVIRONMENT:

The product does not require any special labour protection measures. For reasons of working hygiene, we recommend avoiding eating, drinking and smoking during processing of this product. Store out of the reach of children. For more information refer to www.uzin.com or contact +49 731 4097-0.

DISPOSAL:

Empty shells and the cardboard packaging can be recycled. Material remnants can be disposed of as household waste.