

Universal skirting tape thread scrim

UZIN U-TACK

Dry adhesive for materials made of textile, PVC, rubber and linoleum for flooring strips, cove skirting, support profiles and hard foam skirting.

MAIN APPLICATION FIELD:

- ▶ Textile floor coverings with all common backings
- ▶ PVC floor covering strips
- ▶ Flexible PVC skirting
- ▶ PVC cove formers and PVC covered skirtings
- ▶ Solid-core skirting i.e. Döllken
- ▶ Linoleum skirting strips

SUITABLE ON / FOR:

- ▶ Plaster
- ▶ Brickwork
- ▶ Metal (untreated)
- ▶ Painted surfaces
- ▶ Plastics
- ▶ Wood
- ▶ Concrete
- ▶ Ceramics
- ▶ Gypsum (primed)
- ▶ Wallpaper*
- ▶ Levelling compound (primed)

Note: Obtain technical advice for additional combinations of floor covering and skirtings

*see note for preparation



PRODUCT BENEFITS/FEATURES:


UZIN U-Tack is a multi-purpose adhesive tape for securely installing different types of skirting and floor covering strips.

- ▶ multi-purpose
- ▶ quick installations
- ▶ solvent-free

TECHNICAL DATA:

Packaging	carton
Shelf life	min. 24 months
Color	transparent
Open time	unlimited
Setting time / cure time	none
Ready for foot traffic	immediately after installation
Minimum application temperature	15 ° C at ground level
Loadable	immediately after installation
Joint sealing	immediately after installation

*At 20 °C and 65% relative humidity.



for skirtings and floor covering strips
ON surfaces up to 1.5 mm in structure

SUBSTRATE PREPARATION:

- ▶ The substrate must be permanently dry, hard, load-bearing, flat, free from grease, dust and silicon, in accordance with the respective national standards (EN, DIN, VOB, OE, SIA).
- ▶ Wallpaper must be firmly bonded or cut / removed for the height covered by the skirting.
- ▶ Bind dust with a solvent-free primer (e. g. UZIN PE 260).
- ▶ Ensure the floor covering and Contact are free from contortions before installing. Allow the floor covering (and Contact) to acclimatise sufficiently according to the manufacturers recommendations.
- ▶ For textile flooring plinths up to 1.5 mm substrate structure.
- ▶ For PVC, rubber and linoleum plinths up to 1.0 mm substrate structure.
- ▶ For Solid-core skirting up to 0.5 mm substrate structure.

APPLICATION:

Application of curved PVC skirting:

1)

- ▶ Install the PVC floor covering onto the floor according to manufacturer's recommendation, leaving a 10 cm gap from the wall



2)

- ▶ Place UZIN U-Tack onto the round paper sheet
- ▶ Apply UZIN U-Tack at an appropriate level to the wall and rub across firmly



3)

- ▶ Cut suitable PVC cove formers (min. 20 mm x 20 mm) and exactly match / mitre
- ▶ Cut 2 cm of the protective paper from the lower part of UZIN U-Tack and pull off



4)

- ▶ Apply clean PVC cover formers from the corner
- ▶ Press onto UZIN U-Tack section by section without twisting or stressing



5)

- ▶ Apply UZIN U-Tack to the floor from the edge of the floor covering and rub down well
- ▶ The PVC cove former will be slightly overlapped
- ▶ Install and butt UZIN U-Tack at corners



6)

- ▶ Cut inside/outside corners to size with the help of a template and fit



8)

- ▶ Fold the covering down from the wall and pull off the protective paper
- ▶ Press the floor covering onto the cove former and; rub or roll firmly onto the wall



7)

- ▶ Cut floor covering strips to size
- ▶ Pull off the protective paper from UZIN U-Tack adhering to the floor
- ▶ Start to install the floor covering
- ▶ Rub or roll down firmly onto the floor

Application of flexible PVC skirting:

1)

- ▶ Clean the backing




2)

- ▶ Place UZIN U-Tack on to the protective paper sheet
- ▶ Apply UZIN U-Tack at an appropriate level to the wall

- ▶ Rub down well




- 3)
- ▶ Pull off the protective paper section by section up to approx. 20 cm before the corner
 - ▶ Without twisting or pulling install the skirting up to approx. 20 cm before the corner

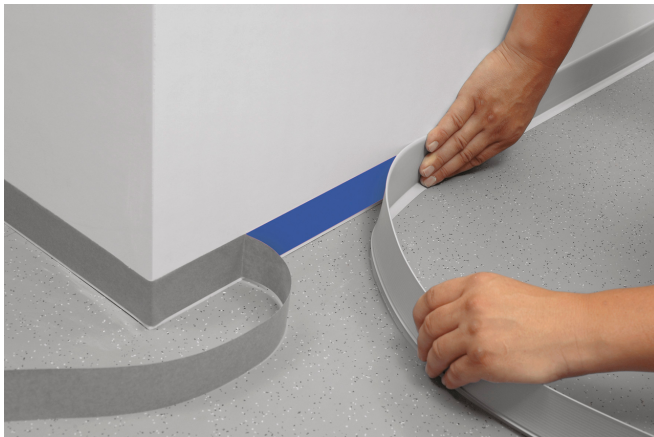

- 4)
- ▶ For corners heat the back of the skirting and bend to shape
 - ▶ Remove the protective paper, and without twisting or pulling install the skirting. Then tap along the skirting.



- 5)
- ▶ Avoid open joints by super gluing the ends together

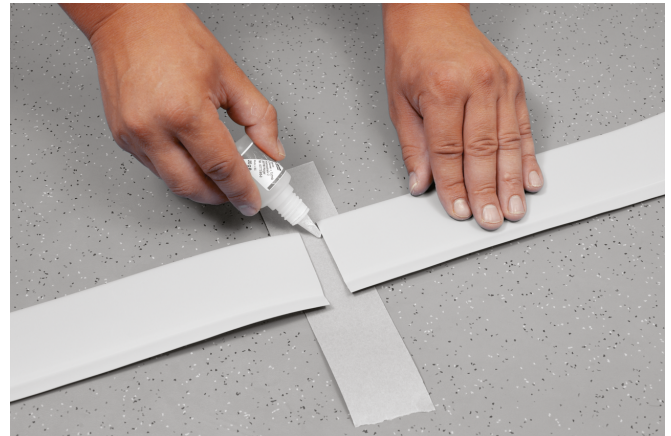

Application of carpet skirting:

- 1)
- ▶ Fit UZIN U-Tack to the backing of the carpet skirting (by hand or with the applicator)



- 2)
- ▶ Pull off the protective paper
 - ▶ Without twisting or pulling install the carpet skirting



3)

- ▶ Tap along the skirting using a rubber mallet.



4)

- ▶ Always Pre-install corners over a length of 20 cm
- ▶ Before removing the protective paper, pre-bend the carpet skirting at the corners (to relieve tension)



Application of skirting strips:


1)

- ▶ Depending on the widths of the skirting strip install the corresponding size of UZIN U-Tack to the back of the strip. Press down and rub along using a pressure roller



2)

- ▶ Pull off the protective paper

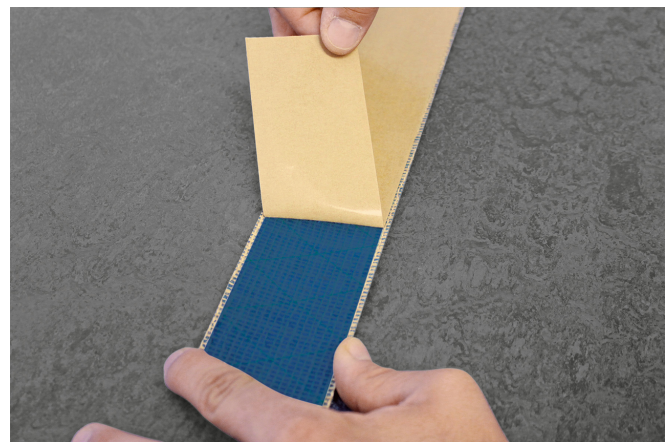

3)

- ▶ Without twisting or pulling install the flooring strip onto the wall



4)

- ▶ Push in firmly and then apply pressure along the skirting strip
- ▶ Im mediately install silicone into the joint between the floor covering and skirting strips



Application of skirting board rails:

1)

- ▶ Pull up and lock the roll holder
- ▶ Fit the adhesive-repellent paper discs



2)

- ▶ Depending on the direction of work, place the UZIN U-Tack in the applicator running to the left or the right
- ▶ Lower the roll holder



3)

- ▶ Apply UZIN U-Tack to the wall using the applicator

- ▶ For skirting boards with a height of 10 cm, position a second strip of UZIN U-Tack by hand directly above the first strip



4)

- ▶ Remove the protective paper
- ▶ Install the skirting onto the UZIN U-Tack
- ▶ Tap along the skirting using a rubber mallet



IMPORTANT NOTES:

Storage:

Store on protected cut area, in a dry, cool area without exposure to direct sunlight.

UZIN grants a 5-year warranty for all properties claimed in the installation instructions.

- ▶ Follow the generally acknowledged rules of the trade and of technology for the installation of floor covering of the respective applicable standards (EN, DIN, VOB, OE, SIA) In all cases, some adhesion tests must be carried out on-site before carrying out the installation.

The warranty becomes void if:

- ▶ unusual influences, and in particular those of a chemical or mechanical nature, affect the product.
- ▶ used or processed differently than stated in the installation instructions.
- ▶ U-Tack may only be used as supplement on stairs.

- ▶ moisture affects U-Tack.
- ▶ installation was performed below 15 °C (on the wall).
- ▶ U-Tack is used in areas with increased humidity or thermal exposures (e. g. conservatories).

SEALS OF QUALITY & ECOLABELS:

- ▶ EMICODE EC 1 PLUS / Very low emission
- ▶ Blue Angel according to DE-UZ 113 / Environmentally friendly because of low emissions

COMPOSITION:

Acrylic copolymers, wetting and defoaming agents, laid scrim, paper.

PROTECTION OF THE WORKPLACE AND THE ENVIRONMENT:

The product does not require any special labour protection measures. For reasons of working hygiene, we recommend avoiding eating, drinking and smoking during processing of this product. Store out of the reach of children. For more information refer to www.uzin.com or contact +49 731 4097-0.

DISPOSAL:

Empty shells and the cardboard packaging can be recycled. Material remnants can be disposed of as household waste.